 
MICROPHONE COMPATIBILITY - IPHONE



iPhones 4, 4S, 5, 5S, 5C



iPhones 6, 6S, 6 Plus, 6S Plus



iPhones 7, 7 Plus, 8, 8 Plus, XS, XS Max, 11, 11 Pro, 11 Pro Max



iPhones 12, 12 Pro, 12 Pro Max

IMPORTANT

MIC1 - Is the bottom left microphone.

MIC2 - Next to the flash / flashlight.

MIC3 - Next to the front camera.

MIC4 - Is the bottom right microphone.